


# TEMPLATE

FOR BACKSET 2-3/4" (70 mm)

FOR BACKSET 2-3/8" (60 mm)

Fit here on door edge

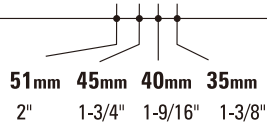

Mark  $\varnothing 1"$  (25.4 mm) hole at centre of door edge.

$\varnothing 2-1/8"$  (54 mm)

